

**Data Sheet** 

# Danfoss *Icon*™ Programmable

## Room Thermostats, 230 V

#### Description



Danfoss *Icon*™ Programmable 088U1020

Danfoss  $Icon^{TM}$  is a range of flush and surface mounted room thermostats for hydronic floor heating applications.

Danfoss *lcon*™ Programmable is mains powered and can be used as a stand-alone thermostat or in combination with wiring center 088H0016.

The thermostat uses a triac output and can control up to 5 thermal actuators.

The user can choose between 7 pre-defined heating schedules. A schedule can be temporarily overrided by using the three mode keys.

The thermostat can also operature without scheduling (constant room temperature setpoint).

The thermostat uses forecast (adaptive learning).

The thermostat uses a "touch on glass" interface with a shine through display. The display is "OFF" in normal operation.



Danfoss *Icon*™ Programmable 088U1025

#### **Features**

- Accurate PWM-control
- · Compatible with 3'rd party wall frames
- Shine through display with mode keys
- 7 pre-defined schedules and forecast
- · Range limitation via user menu
- Neutral design and simple user interface
- Frost protection setting
- Can be used with 230V NC or NO actuators
- Can be optimized for different heatsources via service menu
- Valve exercise feature
- Can be used in systems with cooling
- Has input for global setback
- Can be used with floor sensor (optional)
- Very high UV-resistance

#### Ordering

Product	Version	Size	For junction box	Code no.
Danfoss <i>Icon</i> ™ Programmable	In-wall	80 x 80 mm	Euro, Ø68 mm	088U1020
Danfoss <i>Icon</i> ™ Programmable	In-wall	86 x 86 mm	Square, 70x70 mm	088U1021
Danfoss <i>Icon</i> ™ Programmable	In-wall	88 x 88 mm	Swiss type	088U1022
Danfoss <i>Icon</i> ™ Programmable	On-wall	86 x 86 mm	N.A.	088U1025



#### Accessories

Product	Description	Code no.
Danfoss FH-WC, 230V	Wiring center, 8 channels, up to 16 outputs	088H0016
Danfoss <i>Icon</i> ™ Floor Sensor	47 kΩ, 3 m, IP 67	088U1110


### **Technical specifications**


Туре	Electronic thermostat with touch user interface		
User interface	Capacitive touch and shine through display		
User interface features	Heating icon, arrow up/down, confirm key, back key, Home, Away, Night, Settings		
Display type	Hybrid: red single LED's and custom segment		
Display features	Switches OFF after 10 sec. with no interaction		
Real time clock	Yes, std. Gregorian calendar. 8 hrs. running reserve (new product) down to 1.5 hrs. running reserve in year 10 after installation.		
Automatic daylight saving time	Standard, can be turned off		
Heating schedules	7 x pre-defined schedules (P0-P6) 5/2 days (weekdays and weekends)		
Temperature setting range	5 - 35° C (frost protection setting = 5° C)		
Ambient temperature, storage	-20 to 60° C		
Ambient temperature, used in application	0 to + 40° C		
Controller, type	Adjustable Pulse Width Modulation		
Change over, cooling	Yes, via 230 V input terminal		
Global setback/Away	Yes, via 230 V input terminal		
Max. continuous load (output)	< 50 mA /10 W (= 5 pcs. Danfoss TWA actuators)		
Max. inrush current (actuator)	3 A ≤ 100 ms		
Power consumption	0.2 W		
Power supply (excl. actuators)	220-240 V, 50/60 Hz		
Sensor, room	NTC 47 kΩ		
Sensor, floor (optional)	NTC 47 kΩ, 3 m, IP 68		
Shell material	White parts: PC ASA Grey parts: PC, 10% glass		
IP and Protection class	IP: 21 Protection class: II		
ErP class	ErP (2%)		
Approval	CE, RohS, WEEE		
Colour	White RAL9010 / Dark Grey RAL7024		
Dimensions, in-wall versions	80 x 80 x 11 mm (088U1020) 86 x 86 x 11 mm (088U1021) 88 x 88 x 13 mm (088U1022)		
Dimensions, on-wall version	86 x 86 x 25 mm (088U1025)		




#### **Application examples**

#### Wiring without wiring center, neutral wire from main installation

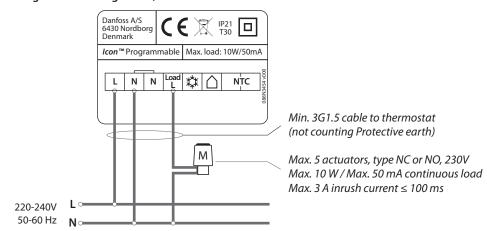

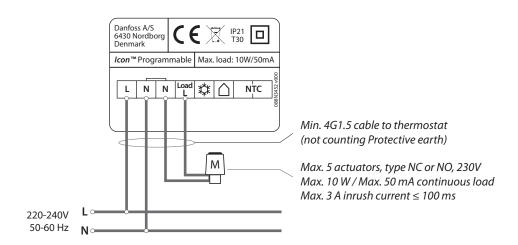

#### Wiring with wiring center

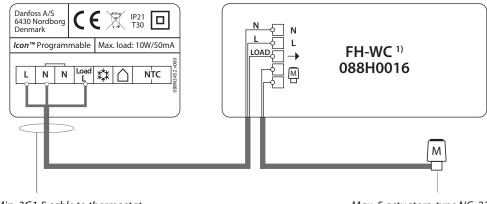

Min. 3G1.5 cable to thermostat (not counting Protective Earth)


Max. 5 actuators, type NC, 230V Max. 10 W / Max. 50 mA continuous load Max. 3 A inrush current ≤ 100 ms

<sup>&</sup>lt;sup>1)</sup> **Note!** Wiring center FH-WC 088H0016 only supports NC actuators, and does not support cooling change-over or global setback.



#### **Application examples**

#### How to set thermostats to cooling mode from external device

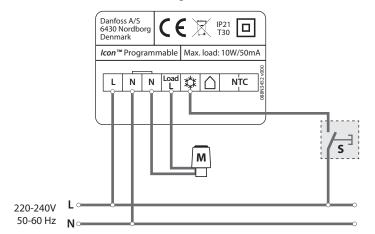


**S**: Can be mechanical switch Summer / Winter or relay activated by external device.

Use the same phase which supplies the thermostat.

The thermostat/room remains in cooling mode as long as the phase is live onto the terminal.

Note! Switch not delivered by Danfoss.

#### How to set thermostats to Away (global standby) from external device

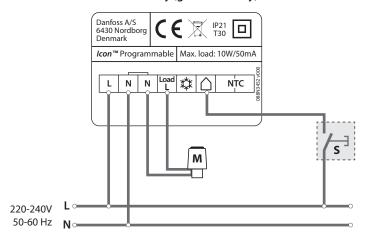


**S**: Can be mechanical switch Home / Away or relay activated by external device.

Use the same phase which supplies the thermostat.

The thermostat/room remains in Away mode as long as the phase is live onto the  $\bigcap$  terminal.

Note! Switch not delivered by Danfoss.

#### How to install a floor sensor

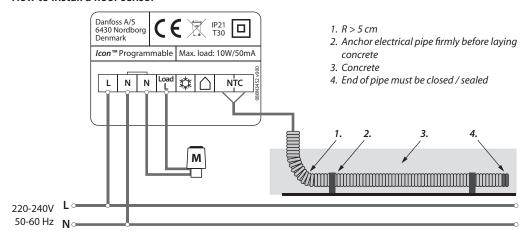


#### Note!


Use Danfoss 47 K $\Omega$  NTC sensor, code no.: 088U1110 Always route external sensors in a suitable electrical pipe!




#### **Dimensions**

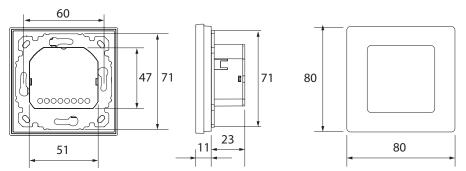


Danfoss *Icon*™ Programmable 088U1020

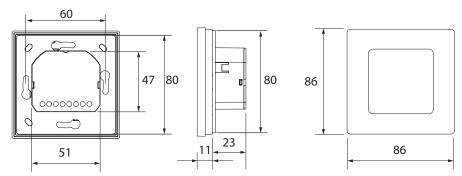

Danfoss Icon<sup>™</sup> Programmable 088U1021

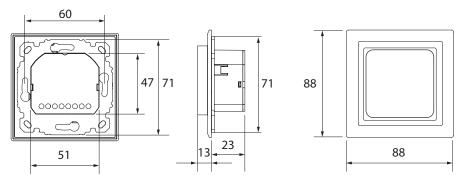

Danfoss *Icon*™ Programmable 088U1022 (incl. Feller EDIZIOdue frame and adapter)

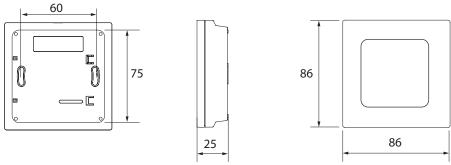

Danfoss *Icon*™ Programmable 088U1025



#### Danfoss A/S

Floor Heating Hydronics • Ulvehavevej 61 • DK-7100 Vejle • Denmark • Phone: +45 7488 8500 • Fax: +45 7488 8501 heating@danfoss.com • www.floorheating.danfoss.com

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed.

All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.