


SPARE PARTS

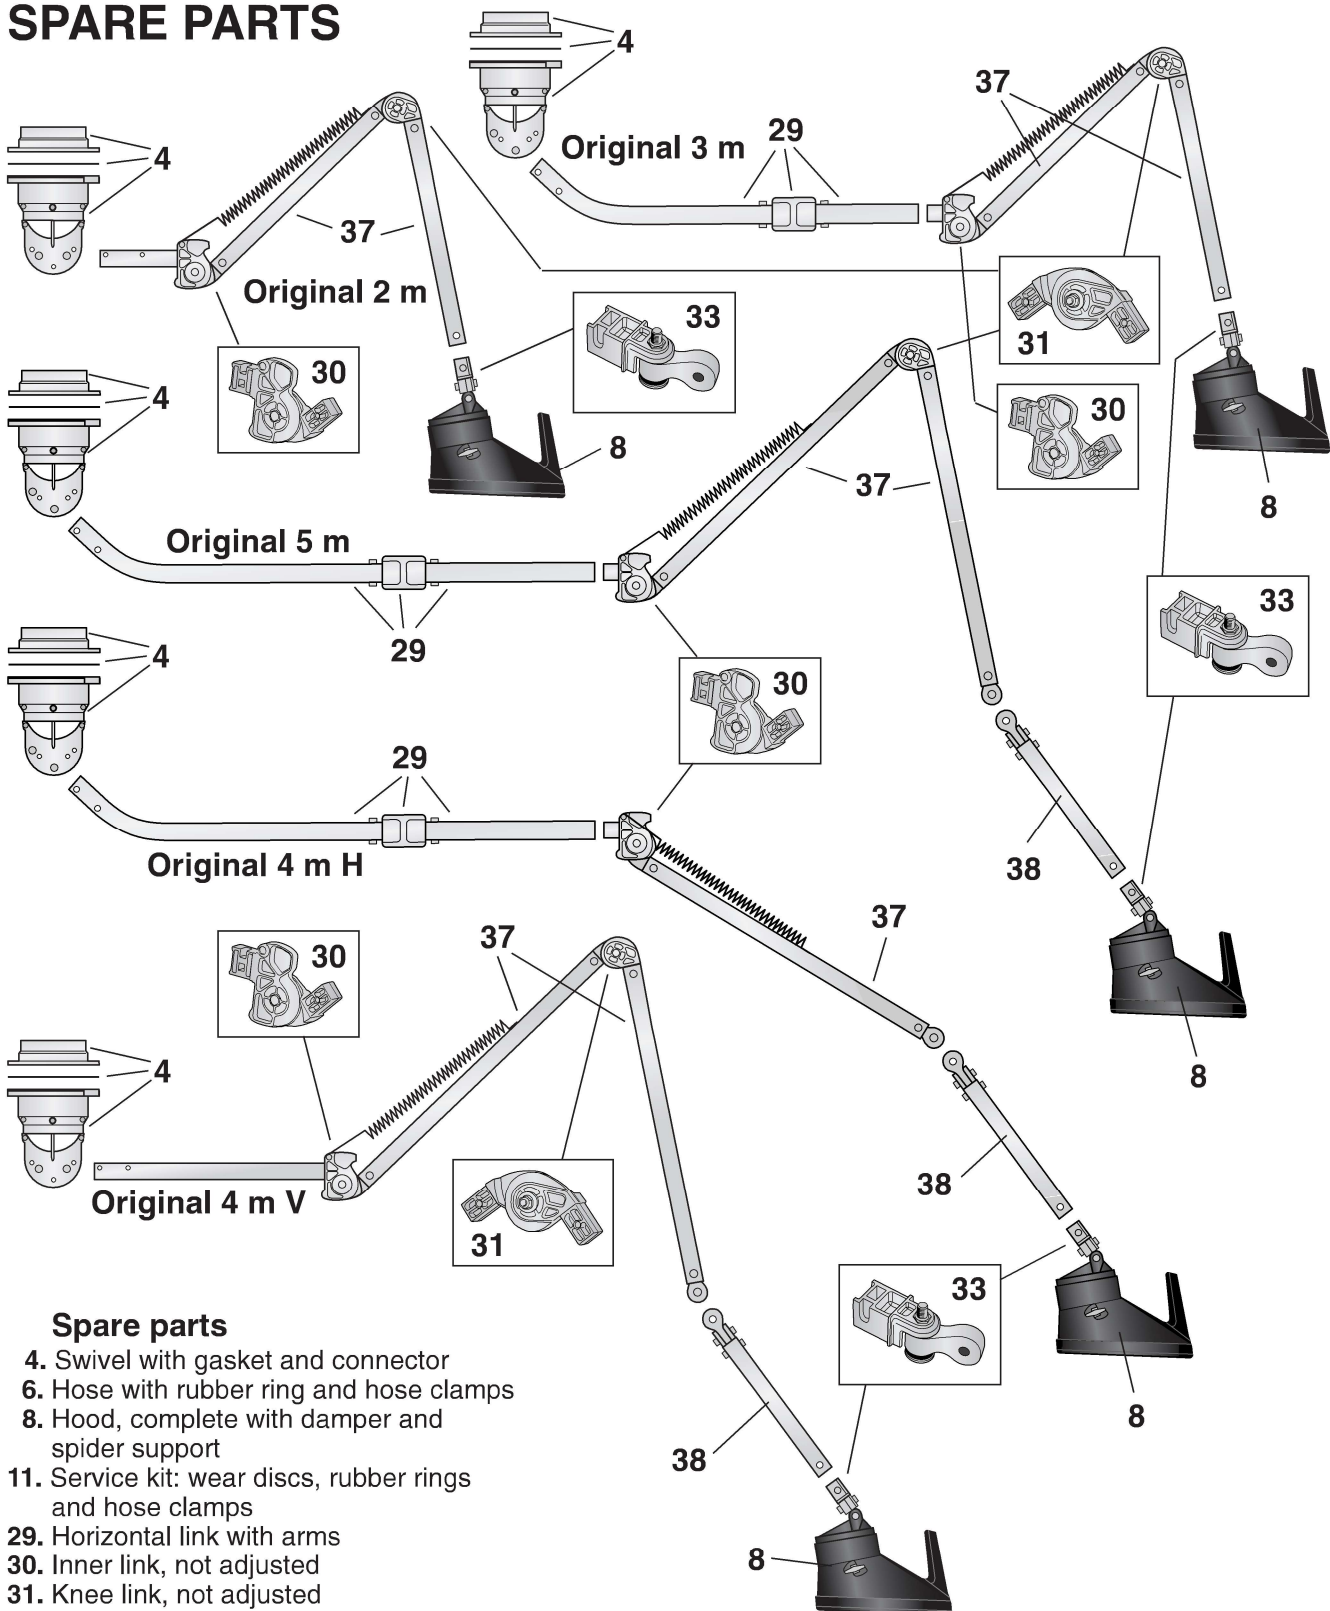

Spare parts

- 4. Swivel with gasket and connector
- 6. Hose with rubber ring and hose clamps
- 8. Hood, complete with damper and spider support
- 11. Service kit: wear discs, rubber rings and hose clamps
- 29. Horizontal link with arms
- 30. Inner link, not adjusted
- 31. Knee link, not adjusted
- 33. Outer link
- 37. Arm system, complete with spring and preset links
- 38. Outer arm with links (for Fume Extractor 4m and 5 m only)