






AVK PRK COUPLINGS FOR PE PIPES

For series 03, series 16 (POM) + series 103 with PRK couplings

Mounting instruction / Montagevejledning

Einbauanleitung / Instruction de montage

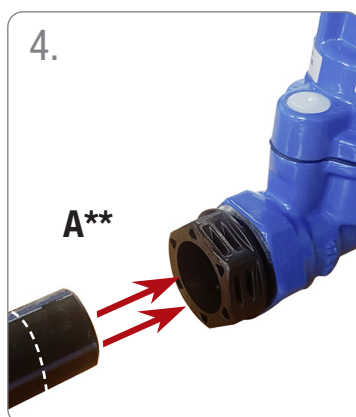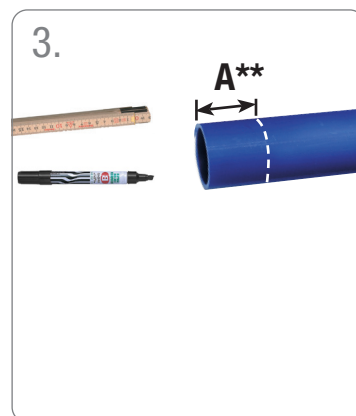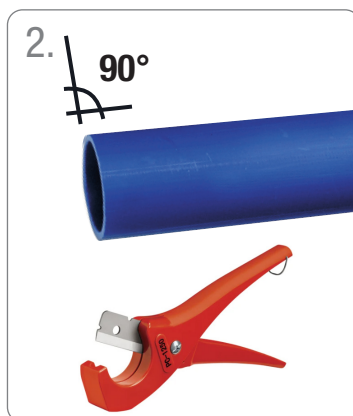

Ensure correct insert depth



Tighten until PRK nut is fully integrated with teeth on valve body.

Insert depth "A"			
	AVK PRK service valve variants		
	Ductile iron	Brass	POM
DN25 / Ø25mm	40mm	40mm	N/A
DN25 / Ø32mm	45mm	45mm	73mm
DN32 / Ø40mm	55mm	55mm	75mm
DN40 / Ø50mm	59mm	59mm	86mm
DN50 / Ø63mm	68mm	68mm	107mm

Valve hexagon dimensions			
	AVK PRK service valve variants		
	Ductile iron	Brass	POM
DN25 / Ø25mm	50mm	50mm	N/A
DN25 / Ø32mm	50mm	50mm	50mm
DN32 / Ø40mm	55mm	55mm	55mm
DN40 / Ø50mm	68mm	68mm	68mm *
DN50 / Ø63mm	85mm	85mm	87mm *

* New development still in process

Expect... **AVK**

Mounting instruction

Montagevejledning / Einbauanleitung /
Instruction de montage

AVK type PRK tensile socket joints for PE pipes



April 2023 - Rev C



www.avkvalves.eu