




—
INSTALLATION INSTRUCTION

Cable entry plate

OEZXP_24R...38R

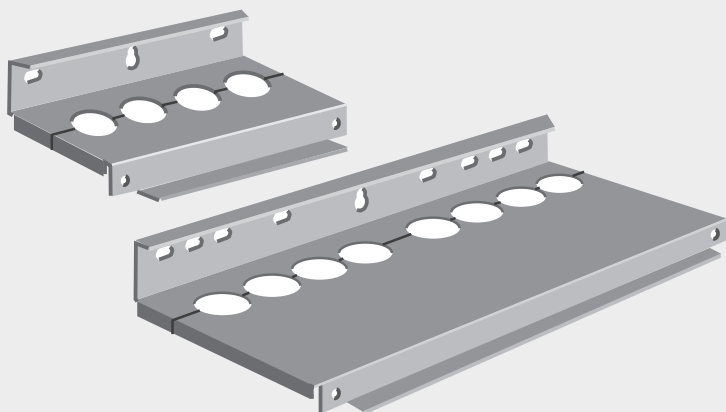


OEZXP_24R...38R

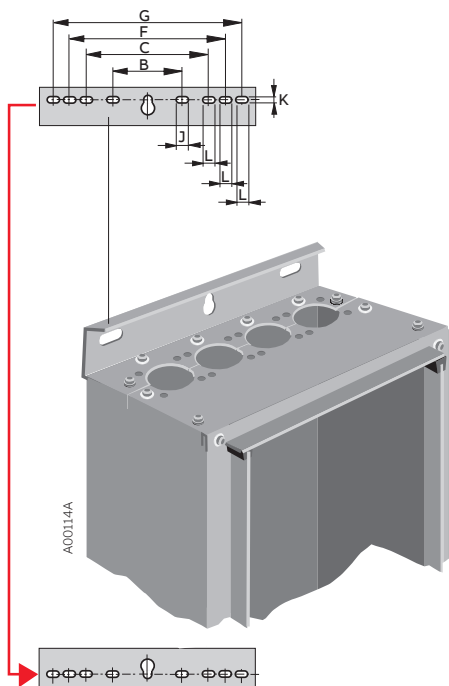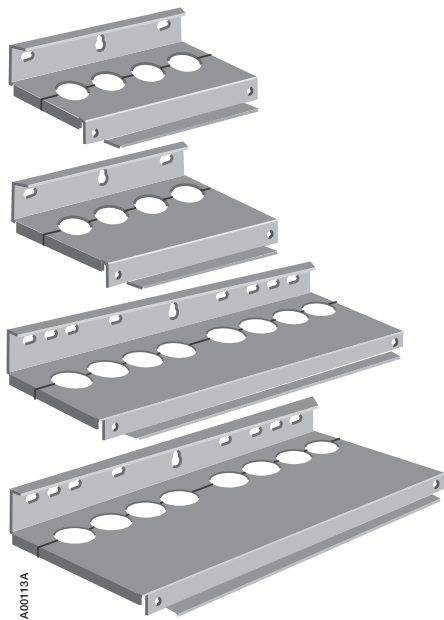

	B	C	F	G	J	K	L
OEZXP_24R	303	-	-	-	35	-	11
OEZXP_34R	303	-	-	-	35	-	11
OEZXP_44R	303	-	-	-	35	-	11
OEZXP_28R	303	512	612	712	35	27	11
OEZXP_38R	303	512	612	712	35	27	11

OEZXP_24R...38R

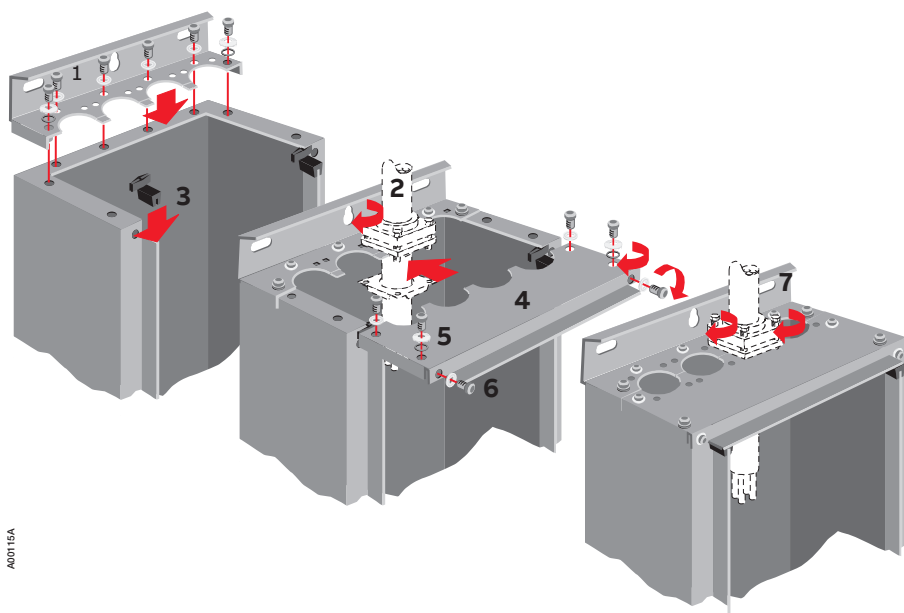

A00115A



Contact us

ABB Oy

P.O. Box 622
FI-65101 Vaasa
Finland

abb.com/lowvoltage