


Auxiliary elements

Selection guide

Combination of auxiliary elements with S200C

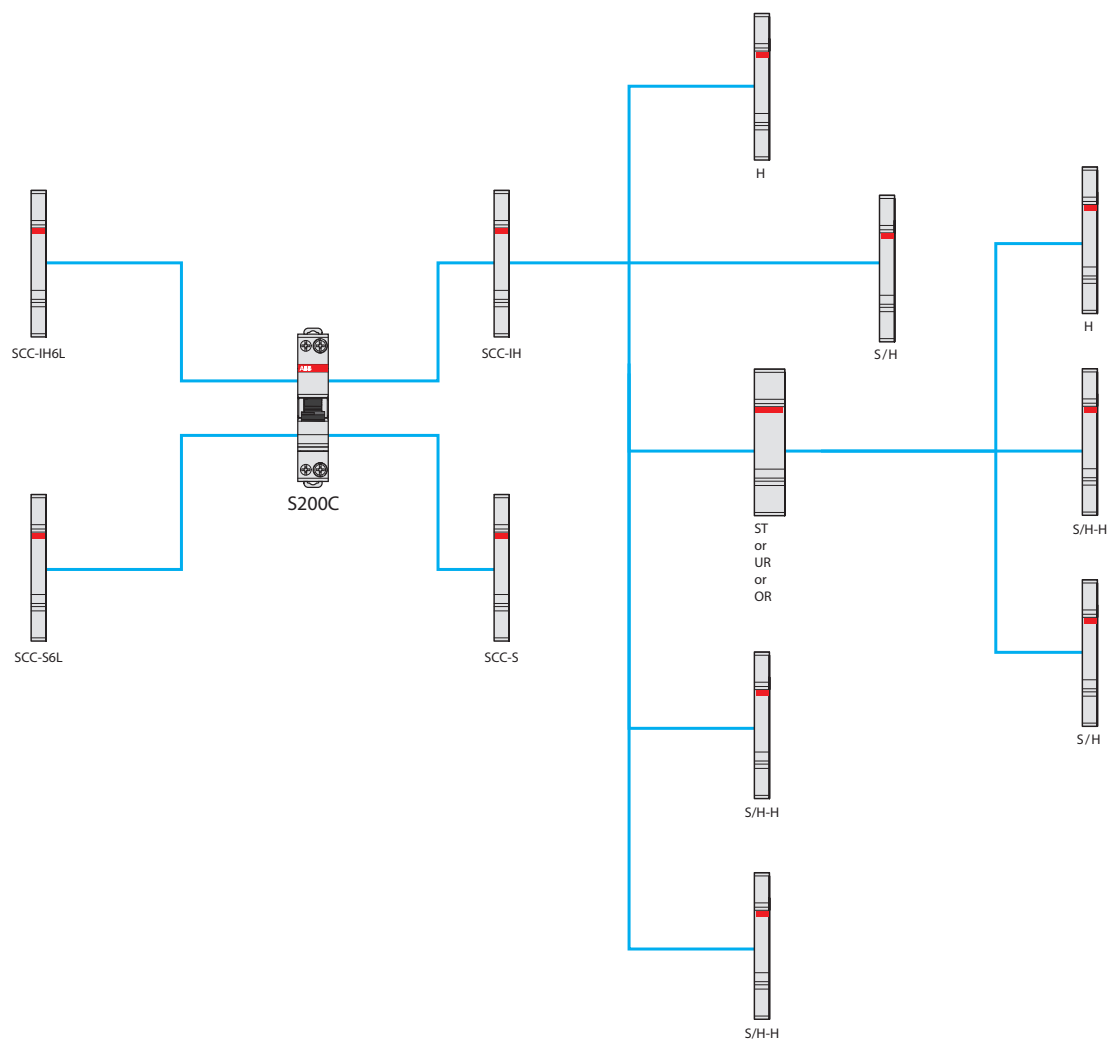

SCC-IH	Auxiliary contact/interface	SCC-IH6R
SCC-S	Signal contact	SCC-S6R
SCC-IHL	Auxiliary contact/interface (left mounting)	SCC-IH6L
SCC-SL	Signal contact (left mounting)	SCC-S6L
H	Auxiliary contact	S2C-H6R
S/H	Signal/auxiliary contact	S2C-S/H6R
ST	Shunt trip	S3C-A...
UR	Undervoltage release	S3C-UA*
OR	Overvoltage release	S2C-OVP
S/H-H	Auxiliary contact-Signal contact/ Auxiliary contact 2CO	S3C-H-S/H6R
S/H-H (H)	Auxiliary contact-Signal contact/ Auxiliary contact 2CO (used as auxiliary contact)	S3C-H-S/H6R

* S3C-UA can accept only one auxiliary or signal contact mounted after it