


Indico

Installation manual

35W, 60W, 90W, 120W, 220-240 V/50-60 Hz,
Class II, IP66, IK 08, 10 kV surge protection device




1. Open the top lid via 2 locking clips on the sides of the luminaire.

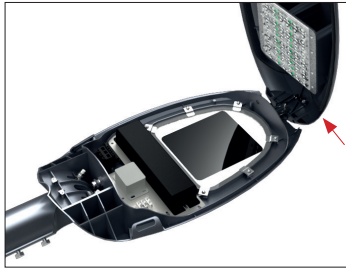

2. When opening make sure the lid is locked in open position.



3. Lid locking device.

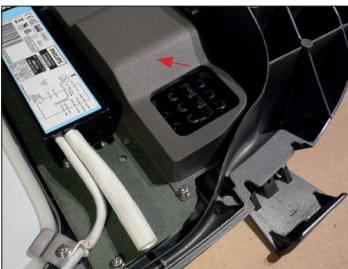

4. Remove the plastic cover.




5. Connect cable to the terminal.
2x1mm² → 2x2,5mm².



6. Tighten the cable gland.



7. Put back the plastic cover.

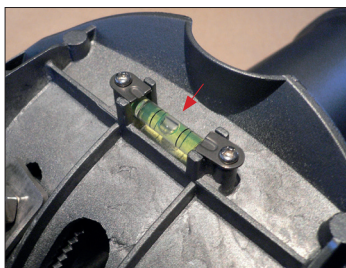


8. Check bubble tube and adjust the luminaire.

35W, 60W, 90W, 120W, 220-240 V/50-60 Hz,
Class II, IP66, IK 08, 10 kV surge protection device



9. The luminaire can be mounted either on horizontal or vertical 60mm arm/pole. To change from horizontal to vertical position, remove the bracket and turn it 180 deg. The luminaire can be tilted $\pm 15^\circ$ in steps of $2,5^\circ$

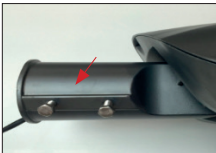

10. Horizontal position.



11. Vertical position.
The luminaire is affixed to the arm/pole by tightening the 4 stainless screws firmly.



12. Lift the locking device before closing the lid.

Maintenance:

Installation and commissioning may only be carried out by authorized specialists. Make sure the power is turned off before installation. Maintain and clean the product periodically for long lifetime and safe use. Clean the product with soft liquid soap

water then wipe dry with soft cloth. Do not use chemicals (alcohol, petrol etcetera) to clean the product. If the external cable is damaged, it shall be replaced by qualified person in order to avoid hazard. Replace any cracked protective glass immediately.