


INS66760
INS66762

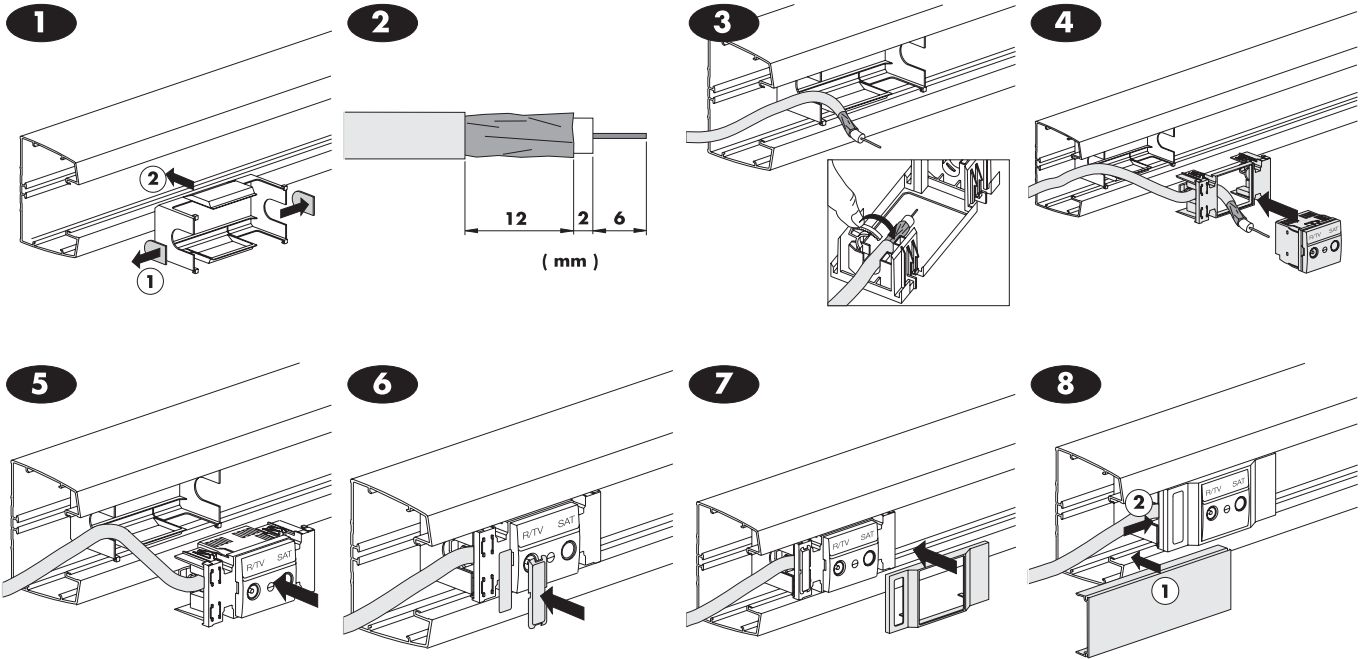

Installation



Dismounting

