

# OPAL





Installation manual | Shower Enclosure

Asennusohje | Suihkunurkka


Installationsinstruktion | Duschhörna



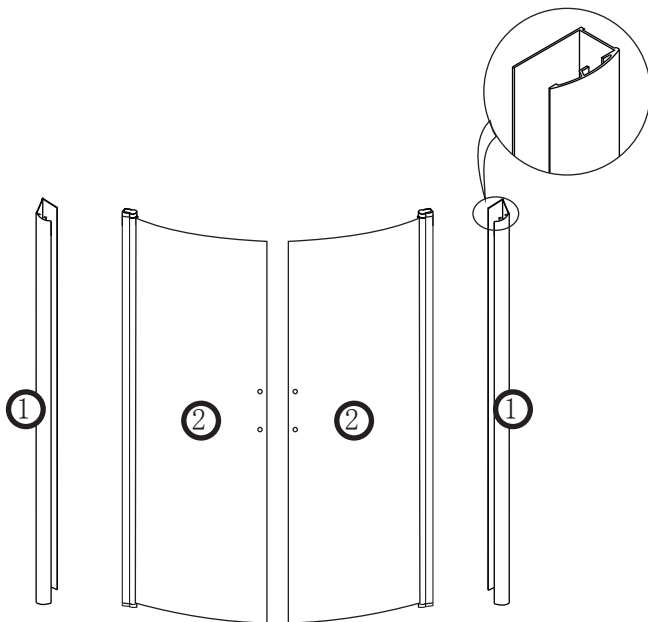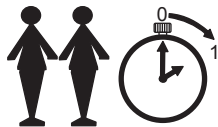

80x80x195 cm, 90x90x195 cm

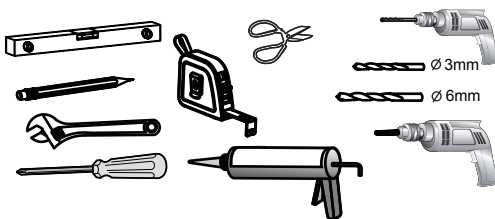



# OPAL




Not included  
Ei sisä lly




A1	A1a 	X6
	A1b 	X6
A2	 ST4X14	X6
A3		X8

B1	 ST4X30	X8
C1		X2
E1		X2
F1		X2




# OPAL

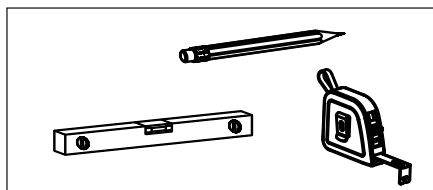


	A
80X80X190cm	77.5-79.5cm
90X90X190cm	87.5-89.5cm

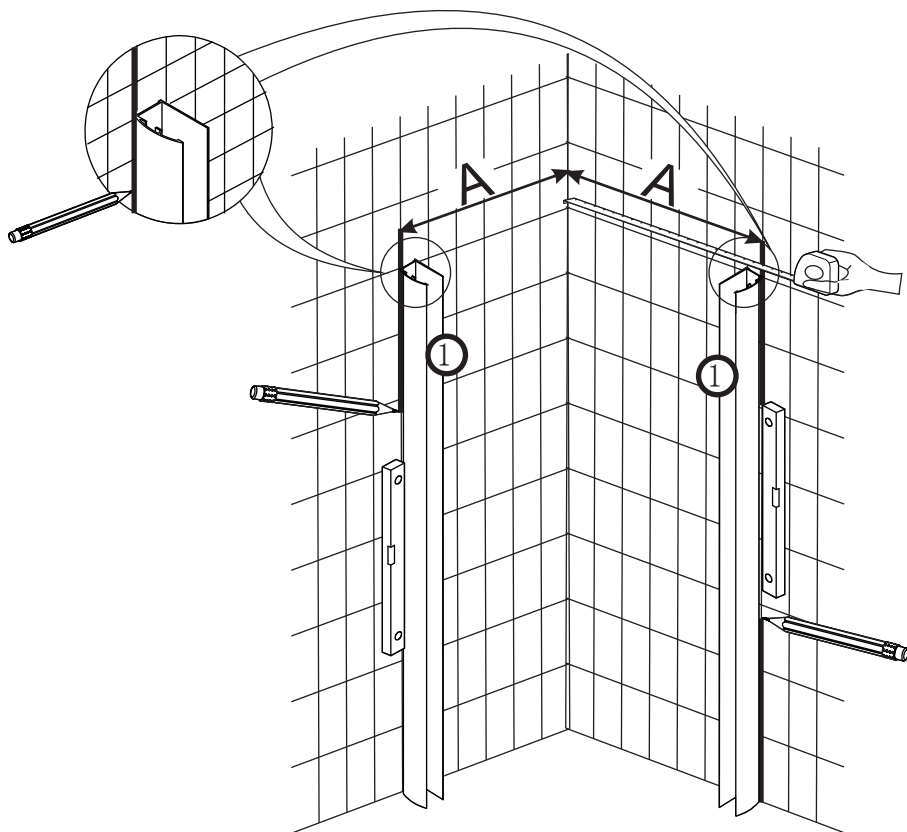



# OPAL

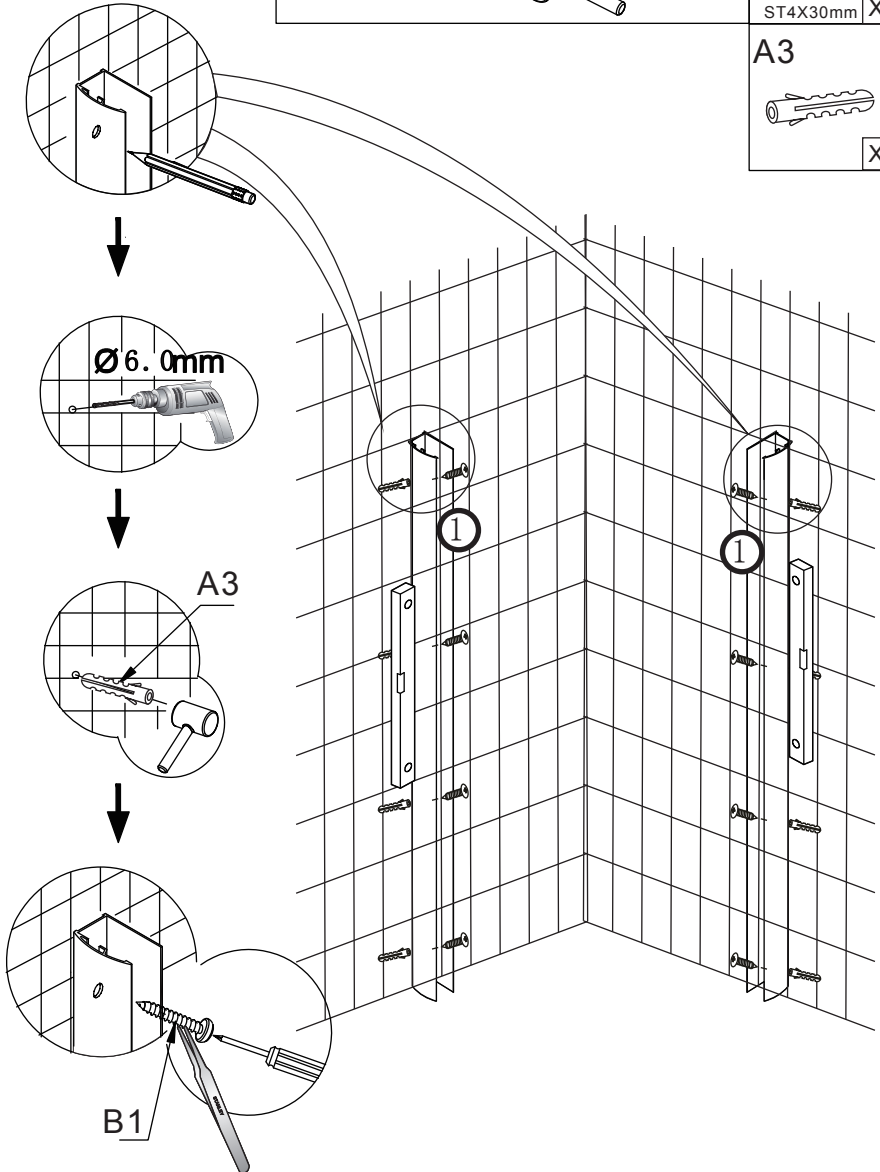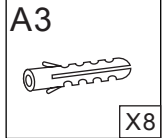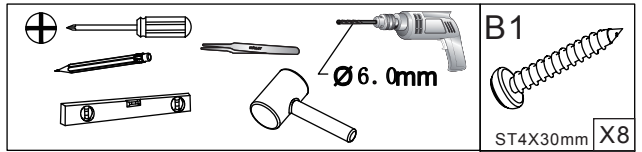




# OPAL

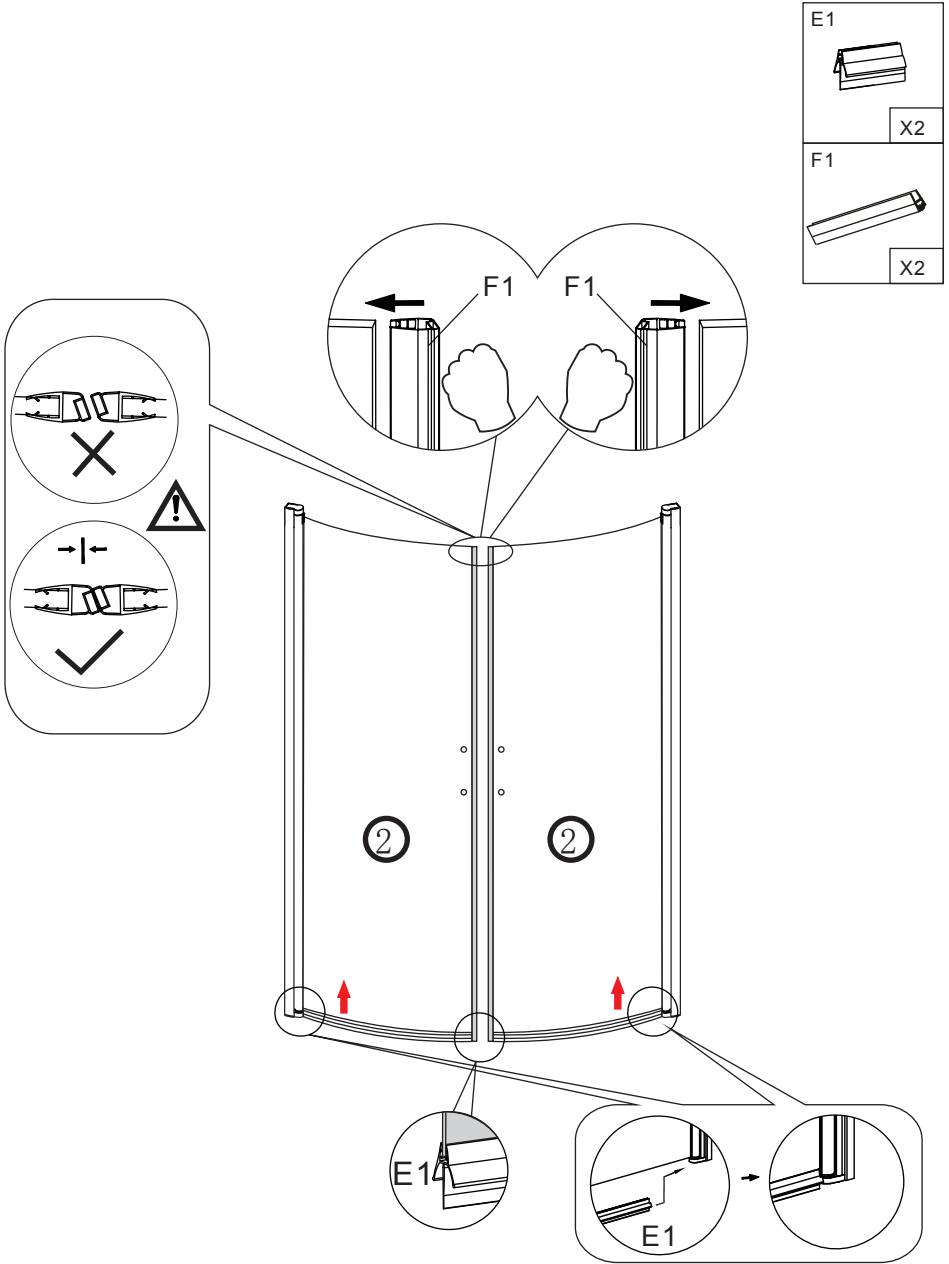



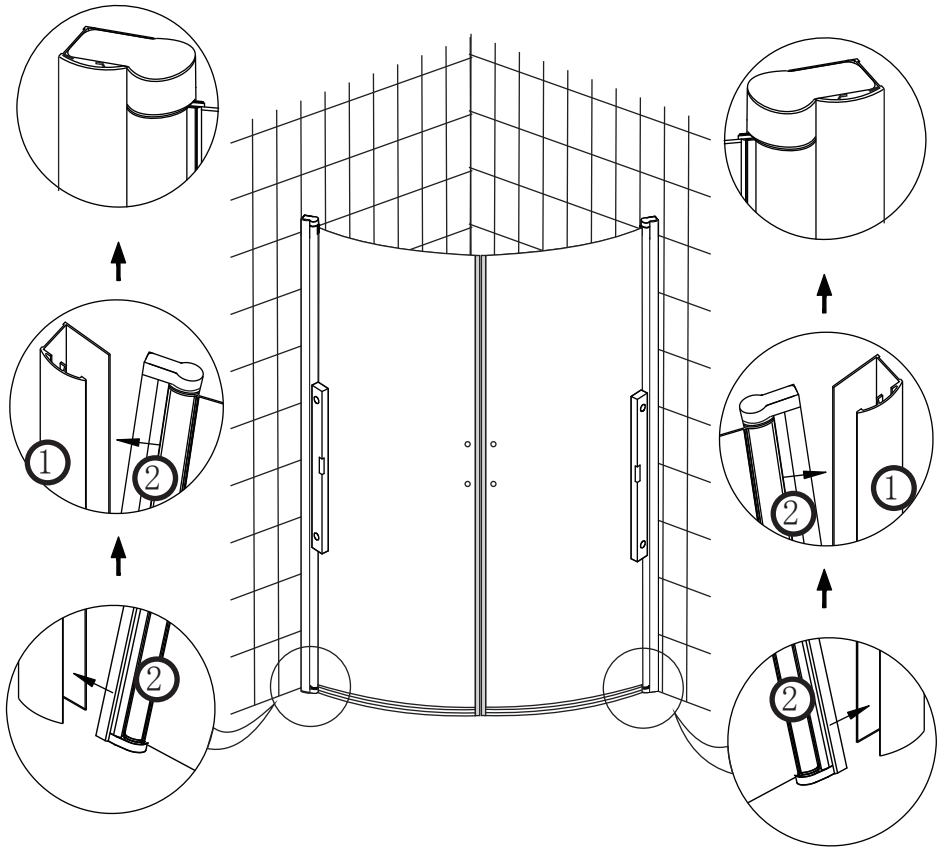


# OPAL

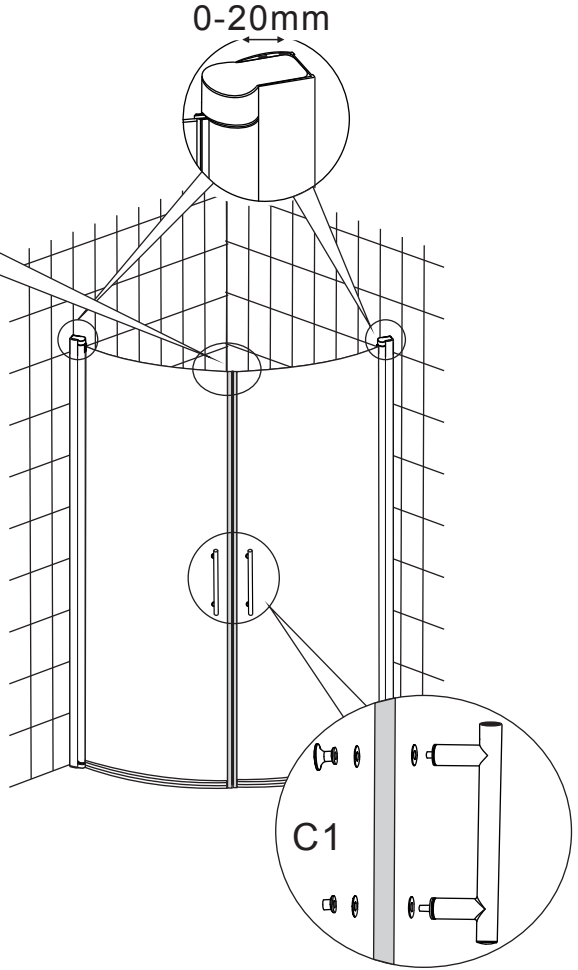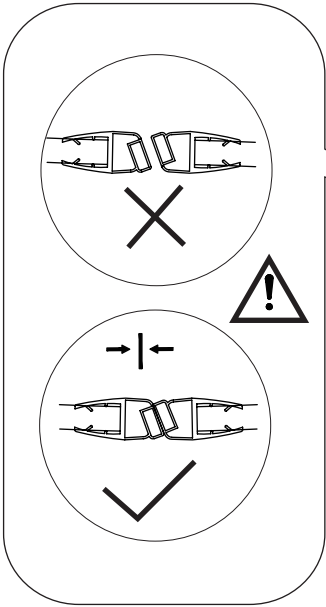
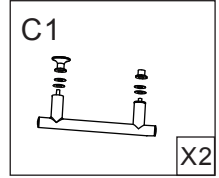


# OPAL

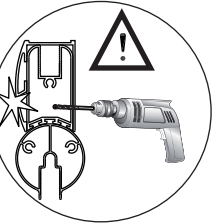

# OPAL

 Ø 3.0mm	A1a  X6
	A1b  X6
	A2  ST4X14mm X6

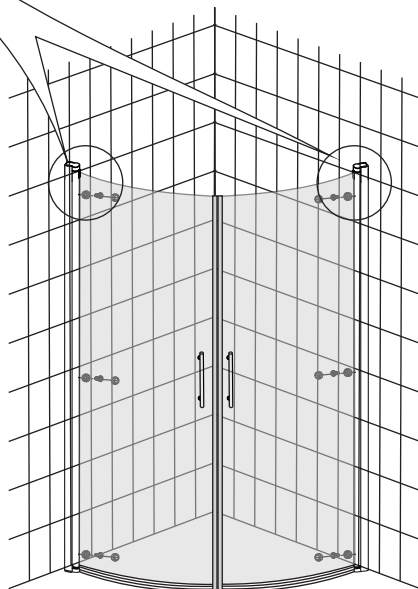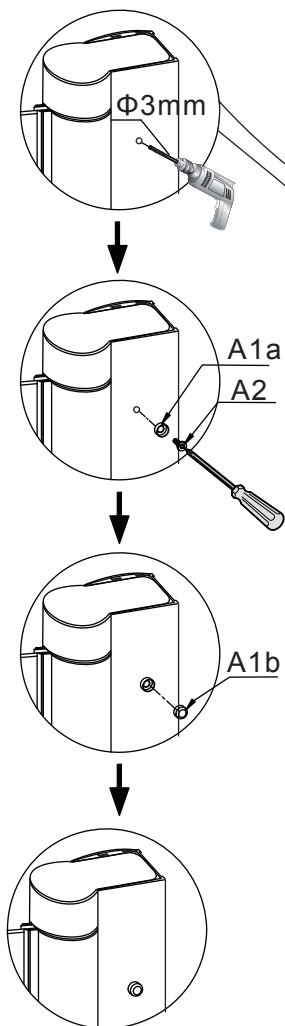



# OPAL

