

# **TECHNICAL INSTRUCTIONS**





# **CHGV**

# AIR COOLED WATER CHILLER WITH HYDRAULIC EQUIPMENT AIR / WATER 47 to 78 kW



CHGV 50

CHGV 64

CHGV 72

CHGV 80

PHRV heat pump model also available

November 2007 10 12 167 - GB - 02

# MARKING CE

This product marked  $\mathbf{C}$  conforms to the essential requirements of the Directives:

- Low voltage no 2006/95/EC.
- Electromagnetic Compatibility no. 89/336 EEC, modified 92/31 EEC and 93/68 EEC.
- Pressure Equipment Directive No. 97/23/EC.



# **CONTENTS**

1	- Application - Use
2	- Presentation
3	- Technical characteristics
4	- Physical characteristics
5	- Description
6	- Cooling performances
7	- Corrections to be made when using anti-freeze
8	- Curves of available pressures
9	- Sound levels
10	- Accessories
11	- "ECH" electronic control
12	- Installation information

# **APPLIANCES FILLED WITH R 407 C**

### R 407 C

- Fluid R 407 C, as opposed to R22, is not a pure fluid but a blend composed of:
  - 23% R 32 + 25% R 125 + 52% R 134 A.
- The compressors approved for operation with this fluid are filled beforehand with polyalcohol oil.

Contrary to mineral oil, it is very hygroscopic: it absorbs the humidity of the ambient air very quickly. This can modify its lubricant properties and lead in time to the destruction of the compressor.

# MAINTENANCE INSTRUCTIONS

- Never add oil to the appliance; the compressor is filled with polyalcohol oil, a special oil which cannot tolerate the presence of other oils.
- 2 The instruments used for:
  - filling,
  - pressure measurements,
  - emptying under vacuum,
  - recovering the fluid,
  - must be compatible and only used for the R 407 C fluid.
- 3 The weight of the refrigerant contained in the storage bottle must be checked constantly. Do not use it from the moment the remaining weight is less than 10% of the total weight.

- 4 In the case of a new charge:
  - do not use the charging cylinder,
  - use a balance and a dip pipe type R 407 C cylinder,
  - charge the weight of R 407 C as per the value indicated on the unit's identification plate,
  - IMPORTANT: see instruction 3 above.
- 5 The charge **must** be undertaken in liquid phase.
- 6 In case of leakage, do not complete the charge: recover the remaining refrigerant for recycling and perform a total charge.

Recovery, recycling or the destruction of the fluid must be done in compliance with the laws in force in the country concerned.

- 7 If the refrigerant circuit is opened, you must:
  - avoid the entry of air into the circuit as much as possible.
  - replace the filter drier,
  - perform the "vacuum operation" at a minimum level of **0.3 mbar (static)**.
- 8 Do not release R 407 C fluid into the atmosphere. This fluid is a fluorinated greenhouse gases, covered by the Kyoto Protocol with a Global Warming Potential (GWP) = 1653 - (CE Directive 842 / 2006).


# 1 - APPLICATION - USE

- Air cooled type chilled water generator intended for climate control in buildings.
- Single package unit, factory assembled and tested.
- Designed for outdoor installation.
- Supplied fully charged with R 407 C refrigerant.
- · Convenient hydraulic and electrical connections.
- Practical service access via removable panels.

# 2 - PRESENTATION

 CHGV: An air cooled chilled water generator with built-in hydraulic equipment.

Refrigerant	Model			
nemgerant	2 refrigerant circuits			
R 407C	50 / 64 / 72 / 80			

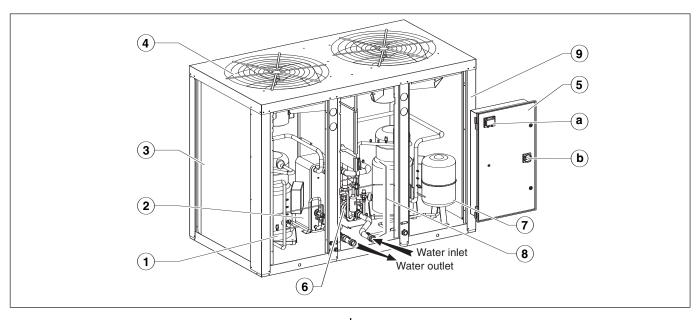

# **1 SCROLL COMPRESSOR**

- · Mounted on vibration pads with sound insulation.
- 1 per circuit.

# **2 WATER EXCHANGER**

- Plate water exchanger with heat insulation.
- 1 per circuit.

# **3** AIR EXCHANGER

- Thin plate air exchanger with protective grille.
- 1 per circuit.

# **4** ELECTRIC FAN UNIT

- Electric fan unit with protective grille.
- 1 per circuit.

# **5** SWITCH BOX

- "ECH" electronic control @ .
- Main switch (b).
- Phase-sequence tester.
- Power and control circuitry protected by magnetothermal circuit breakers.
- Complies with standard EN 60 204-1.
- Short circuit current 10 kA, as per IEC 947-2.

# **6** CIRCULATING PUMP

· Circulating pump with heat insulation.

# **(7) EXPANSION TANK**

# (8) REFRIGERATION CIRCUITS

- R407C loads.
- · Copper piping.
- Thermostatic regulator.
- Filter-dryer.
- HP and LP safety pressure switches.

# **9 CHASSIS - BODYWORK**

 Galvanised sheet metal with light grey oven-baked polyester powder paint (RAL 7035).

# 3 - TECHNICAL CHARACTERISTICS

Model		CHGV 50	CHGV 64	CHGV 72	CHGV 80
Heating capacity	kW	47.60	62	67	78
Nominal power consumption *	kW	20.60	26.40	28.80	29.40
Effictuiveness heating * (	EER)	2.31	2.35	2.33	2.65
Total Max. power consumption **	kW	25	32	36	36.6
Total Max. current consumption **	Α	42.80	56.30	60.40	64.80
Rated total input amperage	Α	38.70	47.70	54	55.50
Starting current	Α	170	185	225	225
Electrical supply cable section	mm²	16	16	25	25
Nominal water flow	m³/h	8.21	10.66	11.52	13.43
	L/s	2.28	2.96	3.20	3.73
Available pressure	kPa	220	160	180	90

- (\*) Gross value without hydraulic pump.
- (\*\*) In the operating range.

# • Power supply:

400V (±10%) / 3 Ph + Neutral + Earth / 50Hz

# Nominal operating conditions:

water inlet temperature
 water outlet temperature
 outdoor dry bulb temperature (dry)
 4 12°C
 7°C
 35°C

# • Operating limits (pure water):

temperature of inlet air to condenser :- 10°C to + 45°C
 water outlet temperature : + 4°C to + 20°C

• Water system pressure: 1.5 to 3 bar.

Consult us for any special climatic conditions departing significantly from the nominal conditions.

# 4 - PHYSICAL CHARACTERISTICS

Dimensions (in mm) are given for standard units without options.

General tolerance ±10 mm.


Condenser air discharge

Condenser air suction


- a Chilled water inlet connection
- **b** Chilled water outlet connection
- c HP and LP hose entry

- Electrical connections
- → Location of the 4 anti-vibration pads (accessory) (100 x 100 x 25 mm) under girders
- **G** Centre of gravity (in the centre of the unit)

# 4.1 - CHGV

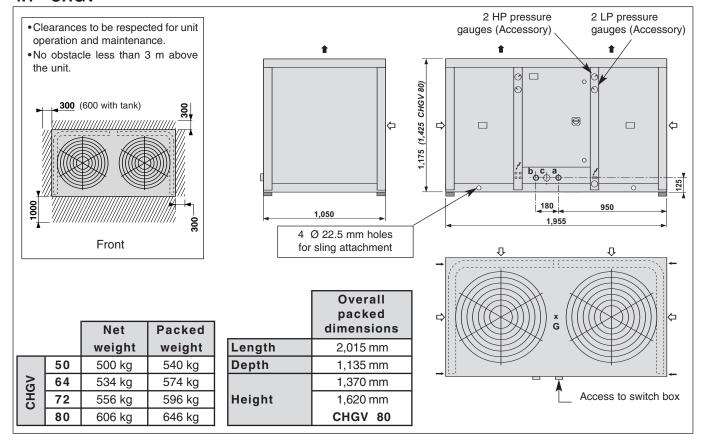

# 4.2 - 300-LITRE BUFFER TANK (ACCESSORY)

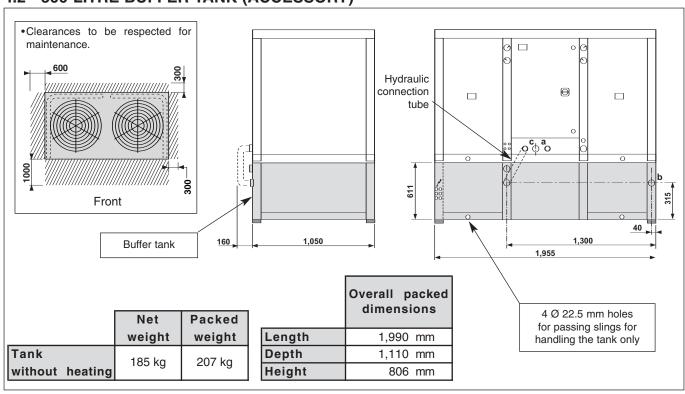

# **5 - DESCRIPTION**

Model			CHGV 64	CHGV 72	CHGV 80
Cooling circuit (number) with HP and LP pressure switches		2	2	2	2
R 407 C refrigerant charge	kg	2 x 7.25	2 x 8	2 x 9	2 x 12.5
Hermetic SCROLL compressor with soundproofing and internal			•	•	•
thermal protection					
Number		2	2	2	2
Power supply 400V / 3 / 50Hz		•	•	•	•
Nominal current per compressor	A	17.00	20.80	23.10	23.80
Nominal power consumed by the compressor	kW	9.90	12.50	14.30	14.70
Helicoidal electric fan, direct coupling, with internal therr	nal protector	•	•	•	•
Number		2	2	2	2
Air flow	m³/h	9,800	11,000	11,000	11,000
Diameter	mm	760	760	760	760
Max. rotation speed (motor)	rpm	620	660	660	660
230V / 1 / 50Hz power supply with speed control for condepressure control	ensation	•	•	•	•
Nominal current per motor (single-phase 230 VAC)	А	3.50	3.90	3.90	3.90
Power consumption per motor	kW	0.75	0.85	0.85	0.85
Air exchanger with protective grille, copper tubes, aluminiu	m fins	•	•	•	•
Number		2	2	2	2
Water exchanger with stainless steel brazed plates AISI 3	16 L with				
thermal insulation		•	•	•	•
Number		2	2	2	2
Water capacity	liters	4	5	6	7
Hydraulic circuit					
Male 1"1/2 coupling (40x49)					
Minimum installation water volume *	liters	120	160	170	200
Maximum installation water volume **	liters	1,500	1,500	1,500	1,500
Expansion tank (1.5 bar)	111013				
Tank capacity	liters	18	18	18	18
Safety valve (3 bar) with pressure gauge	IIIEIS	10	10	10	10
		•	-	-	•
Differential water output pressure switch  Output control valve		•	•	•	•
		•	•	•	•
Fill valve (ø 1/4" female)		•	•	•	•
Water filter supplied (not installed)		•	•	•	•
Circulating pump		•	•	•	•
Maximum power consumption (pump only)	kW	1.40	1.40	1.90	1.90
Maximum current Power supply 400V / 3 / 50Hz	A	2.70	2.70	3.50	3.50
		•	•	•	•
General electrical power supply 400V/3N + Earth/50	)Hz	•	•	•	•
Electrical equipment  Mechanical risks		IP 24	IP 24	IP 24	IP 24 B


If the water volume of the system is below the minimum, a buffer tank must be installed. If the water volume of the system is above the maximum, an additional expansion tank is required.


# 6 - COOLING PERFORMANCES

# **COOLING CAPACITY**


# **TOTAL INPUT POWER**


**CHGV 50** 

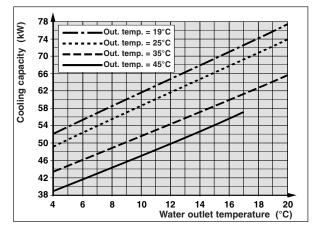

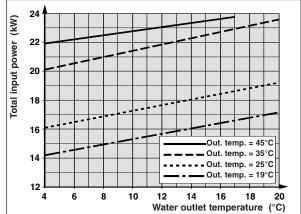



CHGV 64

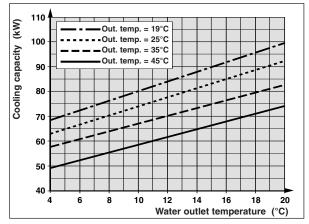

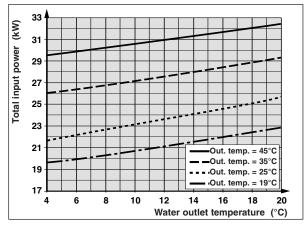



**CHGV 72** 

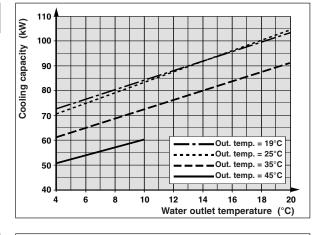

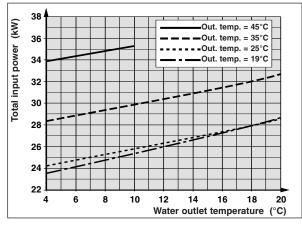

CHGV 80

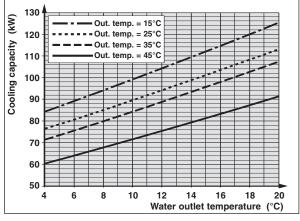

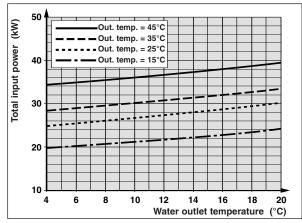

# 7 - CORRECTIONS TO BE MADE WHEN USING ANTI-FREEZE

### • IMPORTANT:

Use monopropylene glycol; a minimum rate of 15% to 20% is needed to avoid any risk of corrosion.

# PRINCIPLE OF USING THE CURVES

A - Choose the percentage of glycol according to the minimum temperature to protect the hydraulic circuit against frost.

# B - Example:


Protection at an external temperature of -15°C, which gives 30% monopropylene glycol (freezing points curve).

The loss of capacity is given on the "Reduction of cooling capacity" curve (0.94).


The new flow is given by the coefficient on the water flow curve (1.113).

Likewise, to determine the new pressure drop coefficient in relation to the nominal flow, read the pressure drop curve (1.19).

Valid curves for setting temperature at the water inlet.

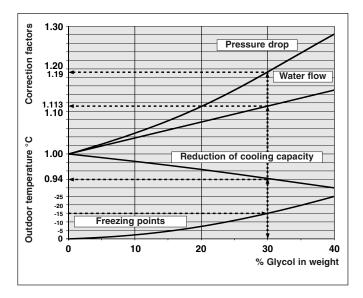

# 8 - AVAILABLE PRESSURE CURVES ON THE HYDRAULIC SYSTEM

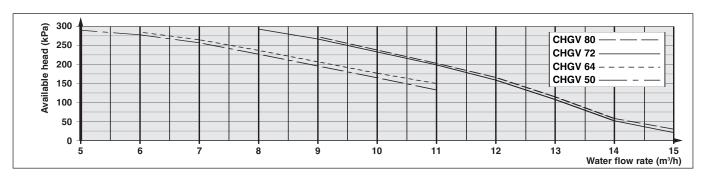

• Values at apparatus outlet without tank. (See § 10.5 for tank pressure losses).

# 9 - SOUND LEVELS


CHGV	Power level (dBA)	Sound-pressure level (dBA)
50	78	50
64	82	54
72	87	59
80	87	59



- Ambient temperature: 35°C.

# • Sound-pressure level:

- Unit installed outdoors (free field) on a reflective surface.
- Measurement carried out at a distance of 10 m.

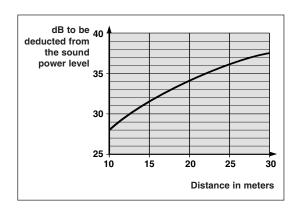

# 10 - ACCESSORIES

# 10.1 - ANTI-VIBRATION KIT

- Kit includes:
  - 1 set of 4 anti-vibration plates, thickness 25 mm code 70600035.
  - 1 set of 2 flexible hoses: length 1.5 m, Ø 1" 1/2 code 70600034.

# 10.2 - HP AND LP PRESSURE GAUGES

- The accessory includes 1 set of 2 pressure gauges (HP and LP). Two per apparatus must be ordered.
- Code 70970007.
- These elements, mounted on the vertical members of the unit's front face, display the high and low pressure values for the refrigeration circuit.

# 10.3 - REMOTE CONTROL

- Code 70250057.
- Enables reporting of the controller's display keypad functions up to a distance of 100 meters.

# 10.4 - SERIAL COMMUNICATIONS INTERFACE RS 485 (MODBUS PROTOCOL)


- Code 70250056.
- Interface module installed inside the unit's electrical box.
- MODBUS protocol. Please consult us for details concerning the protocol and addressing of data.

# 10.5 - 300-LITRE BUFFER TANK

- Code 70600120: model without supplementary heating with 800 W anti-freeze resistance (single-phase 230 VAC),
- Designed to be installed either underneath the unit, or separately.

For installation underneath the unit, the tank is supplied with mounting brackets and an insulated tube for connection between the unit's water outlet and the tank's water inlet.


# **Composition:**

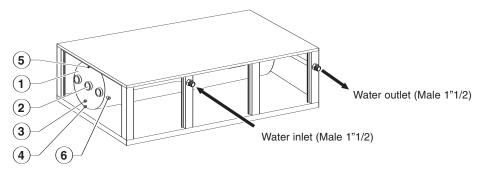

Mark		70600120
Walk		without heating
1	Sheetmetal buffer tank - polyurethane insulation	•
2	800 W anti-freeze resistance	•
3	Fill valve	•
4	Drain valve	•
5	Purge	•
6	Safety valve (5 bar)	•
	Galvanized steel chassis, painted RAL 7035	•

# Anti-freeze resistance:

- Immersion heater mounted on the tank.
- Power: 800 W, single-phase 230 VAC.
- With limiting thermostat.
- . The power supply and heating element control are to be done separately at the time of installation (not supplied).

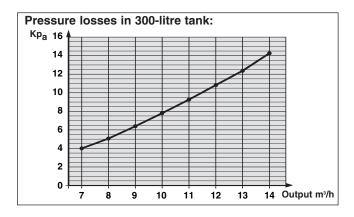



# 11 - "ECH" ELECTRONIC CONTROL

- Microprocessor control module, including:
  - chilled water temperature control (water inlet),
  - control of operating parameters.
  - self-adapting algorithm for water volume reduction,
  - circulating pump control (frost protection and anti-sticking function),
  - dynamic setpoints are possible according to the outside temperature (to be activated at the time of installation by means of special parameterization).
  - anti-short cycle system,
  - hour counter compressor and circulating pump,
  - alarm management,
  - anti-freeze security (temperature probes at water exchanger outlet),
  - digital display of:
    - . water temperature,
    - . set-point,
    - . alarm code (HP, LP, water output, probes, anti-freeze...).
  - remote alarm reporting is possible via a potential-free contact,
  - integrated condensation pressure control (with pressure sensors),
  - remote control with display unit (accessory),
  - serial communications port (RS 485 interface, accessory) MODBUS Protocol.

# 12 - INSTALLATION INFORMATION

· See details in the installation manual.

# 12.1 - INSTALLATION

- Protection index of the unit:
  - IP 24 : for the electrical equipment,
  - (IPXXB: for the mechanical hazards).
- Before installation, verify the following points:
  - the unit must be installed outside in an appropriate location and in compliance with environmental requirements (sound level, integration, etc...),
  - the water chiller's installation location must be perfectly level and strong enough to support the weight of the unit and must have adequate inundation protection,
  - sufficient space around the unit should be provided in order to facilitate servicing and maintenance operations,
  - air suction to the coil and fan discharge must not be obstructed,
  - install the unit above the region's average snowfall level,
  - vibrations and noise must not be transmitted to adjacent buildings.
  - install the machine on anti-vibration pads and fit hoses on piping elements, as required,
  - if necessary, consult an acoustics specialist concerning the unit's optimum location,
  - 4 holes Ø 22.5 enable to place hoisting hooks and lift the unit.

# 12.2 - ELECTRICAL CONNECTIONS

- All required information is indicated on the electrical diagram provided with the unit and in the installation manual.
- Connections are to be made in compliance with the standard code of practice and as per the standards in force at the site of installation.

# 12.3 - HYDRAULIC CONNECTIONS

- The hydraulic connections are to be made in compliance with the standard code of practice.
- IMPERATIVE: Install the filter supplied on the water inlet of the unit.

# 12.4 - STARTING - MAINTENANCE

- · Refer to the installation guide and the maintenance manual.
- IMPORTANT:
  - The unit's electronic control features a frost protection device that automatically starts the water circulating pump depending on the outside temperature (adjustable threshold), even if the unit is turned off.
  - In the event the unit may be taken out of service or in the case of a high risk of freezing:
    - either drain the installation,
    - or add glycol to the circuit.
  - Tank anti-freeze resistance:

its electrical power supply and control must be separate from those of the unit.

Due to our policy of continuous development, our products are liable to modification without notice.

Technibel

R.D. 28 Reyrieux BP 131 01601 Trévoux CEDEX France Phone 33 4 74 00 92 92 - Fax 33 4 74 00 42 00 R.C.S. Bourg-en-Bresse B 759 200 728